



UNIVERSAL BOOTTM

SABODOIN MANUFACTURING INC.

**WHEEL IMMOBILIZER FOR CARS
AND 4X4'S**

UNIVERSAL BOOT-1



**PROTECT
YOUR
EQUIPMENT**

www.universalboot.com

INSTALLATION PROCEDURE



CARRY BOOT TO CAR UNSCREW 3/4" NUT TO OPEN



ADJUST LUG BLOCKER TO RIM SIZE, SCREW 3/4" NUT TIGHTLY WITH HAND.




TIGHTEN 3/4" NUT WITH SUPPLIED WRENCH UNTIL BOOT FEELS FIRMLY ATTACHED AND FINALLY ADD LOCK.

WHEEL IMMOBILIZER FOR ALL CARS AND 4X4'S **UNIVERSAL BOOT-1**

- Simple, reliable, fast and easy to install
- Adjustable for all wheel sizes
- All parts fully repairable and replaceable
- One piece
- Total weight 29 lbs or 13.2 kg

ALSO AVAILABLE

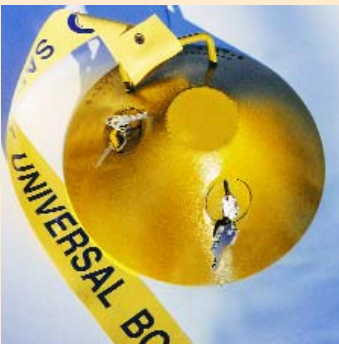

Universal boot-8D
Double locks to double your security.



Universal Boot-8
Heavy duty king pin lock.



Universal Boot-3
Double Wheel Immobilizer for truck.



Universal Boot-7
Heavy Duty Pintle Hitch Trailer Lock.



Universal Boot-11
Budd Wheel Lock.



Universal Boot-12
Container Anti-Lifting Protection.